


Preparation of the sites for the siphon and assembly for floor installation for shower tray
Vorbereitung der Stelle für Siphon und Montage für Bodeneinbau für Duschwanne

1/2


PANDORA

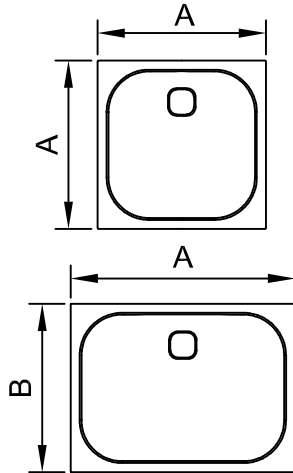


	A	A
PANDORA 90X90	900	900

	A	B
PANDORA 100X80	1000	800
PANDORA 100X90	1000	900
PANDORA 120x80	1200	800
PANDORA 120x90	1200	900


1

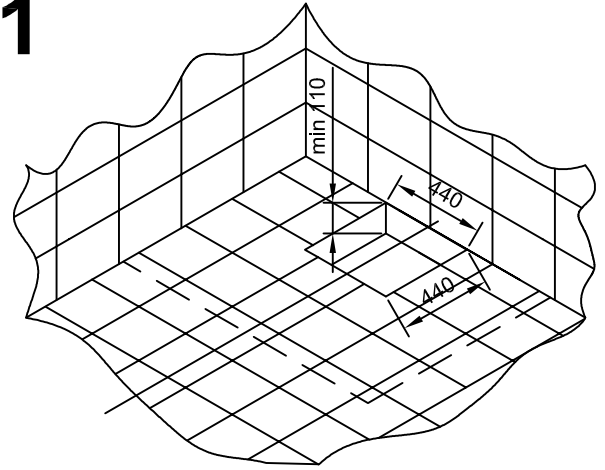


2

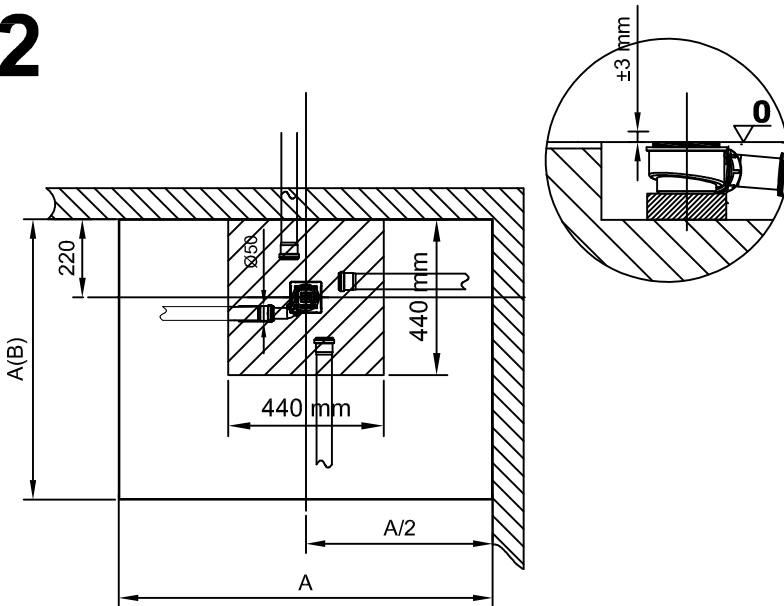


3

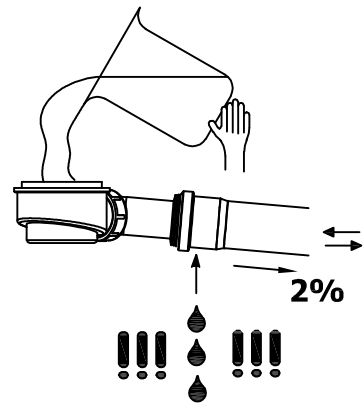

4




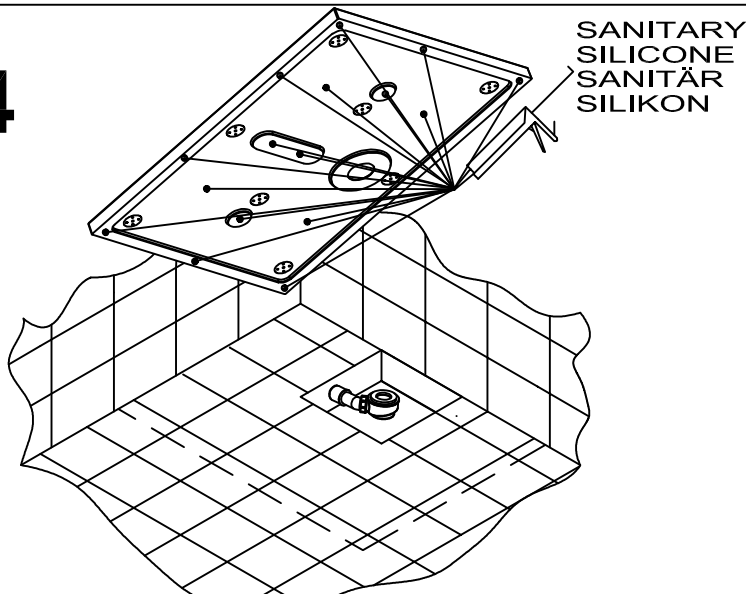


5


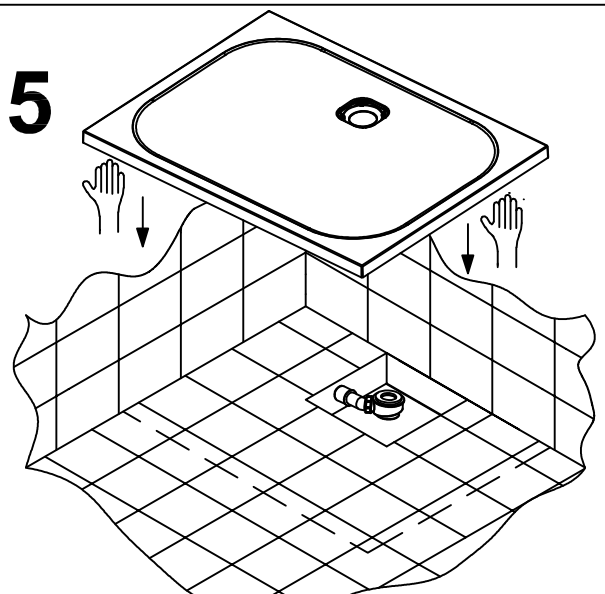


PANDORA







2/2

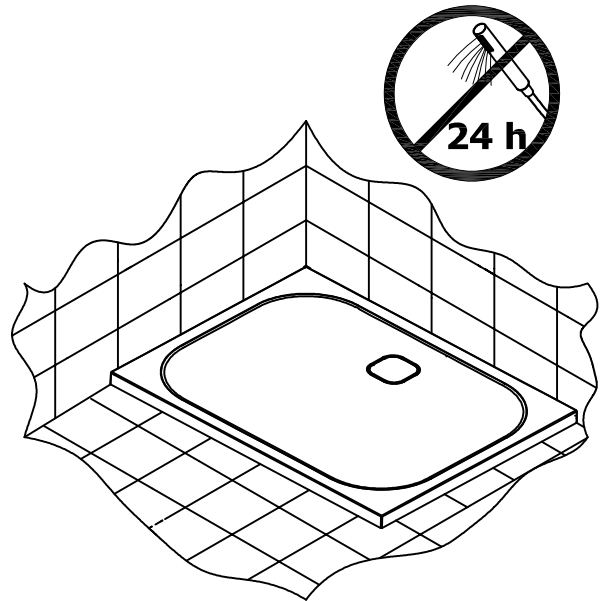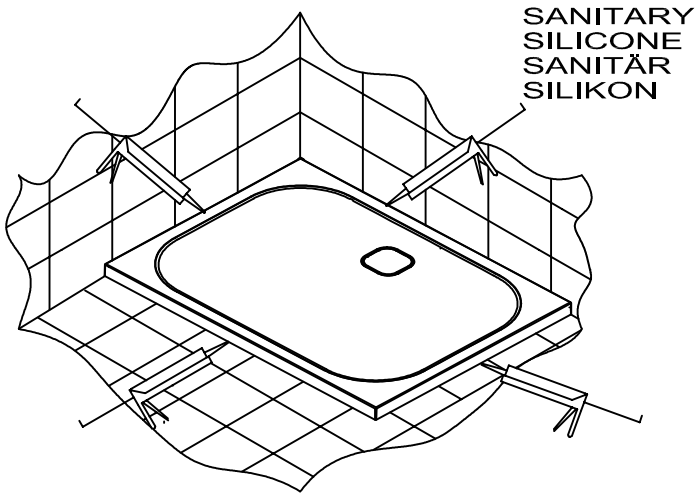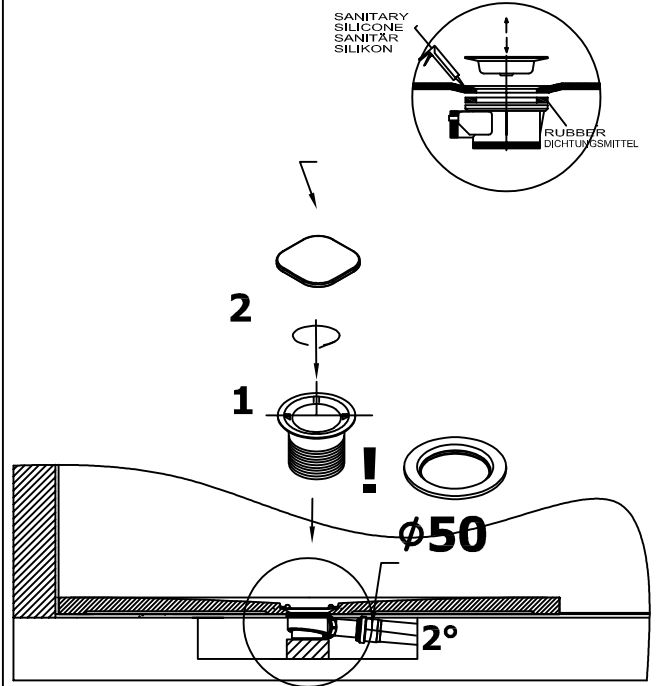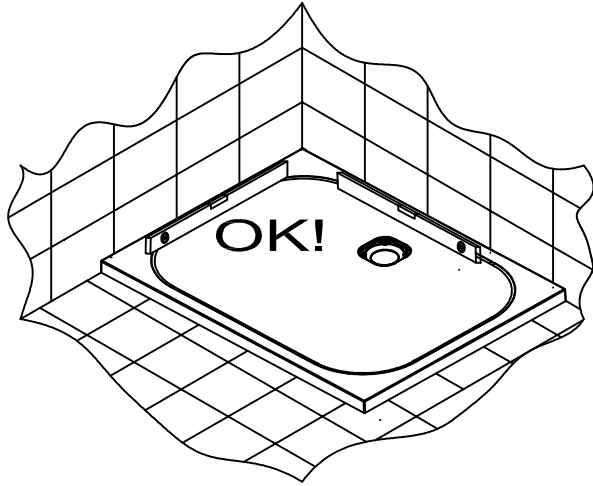






MOONWALK, RE-WALK, ACRO, PANDORA, CANARY, CAPO, LIMBO

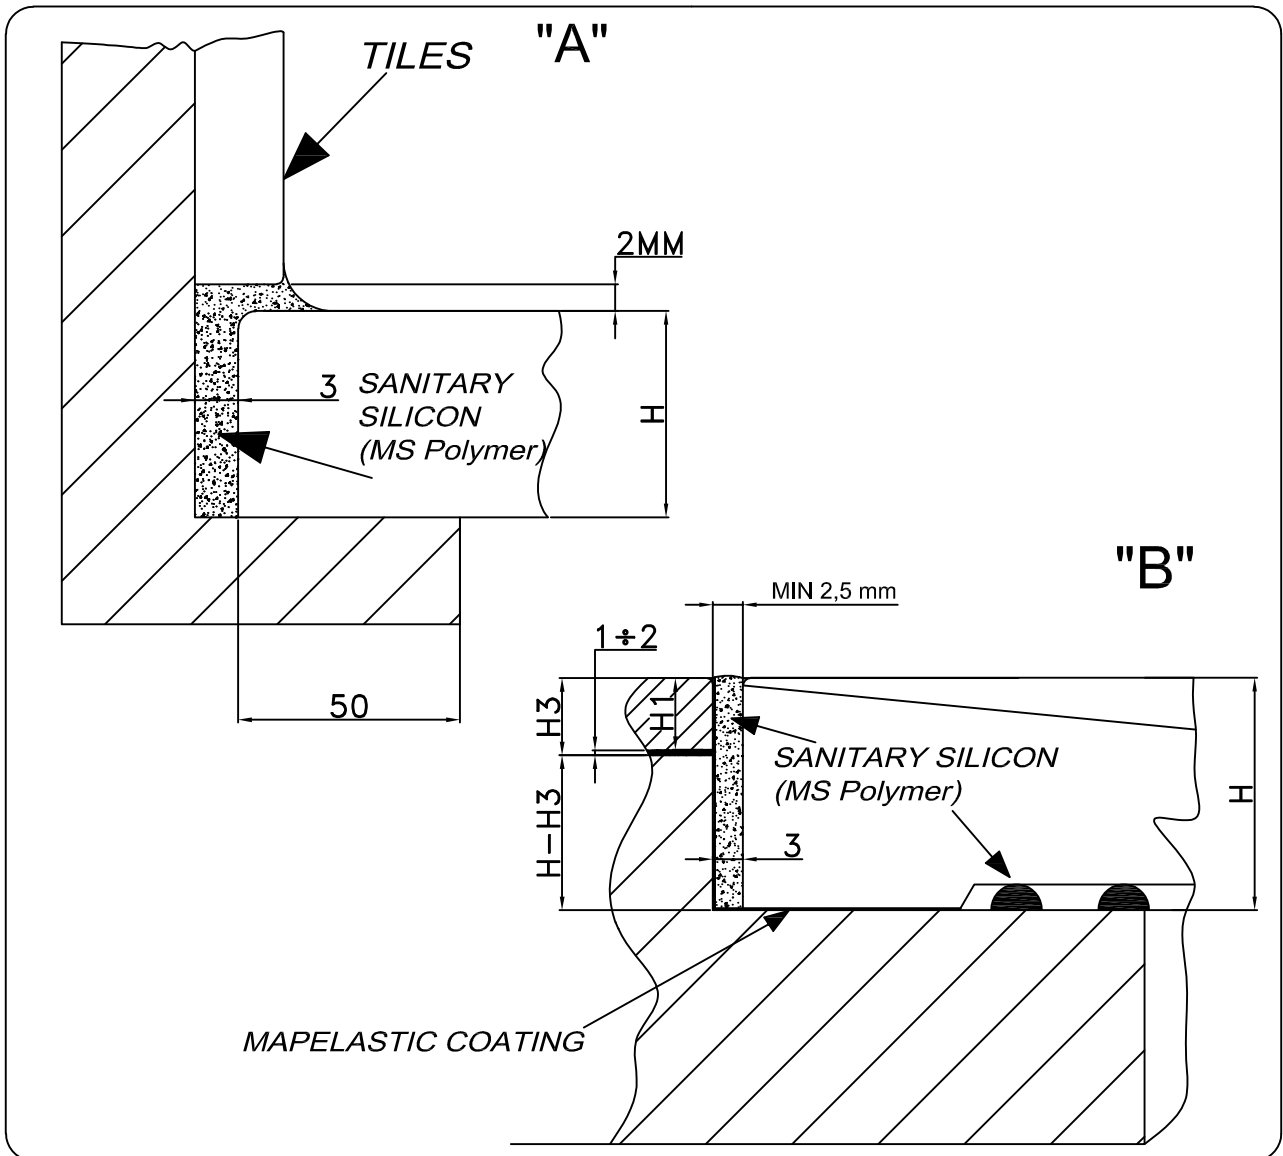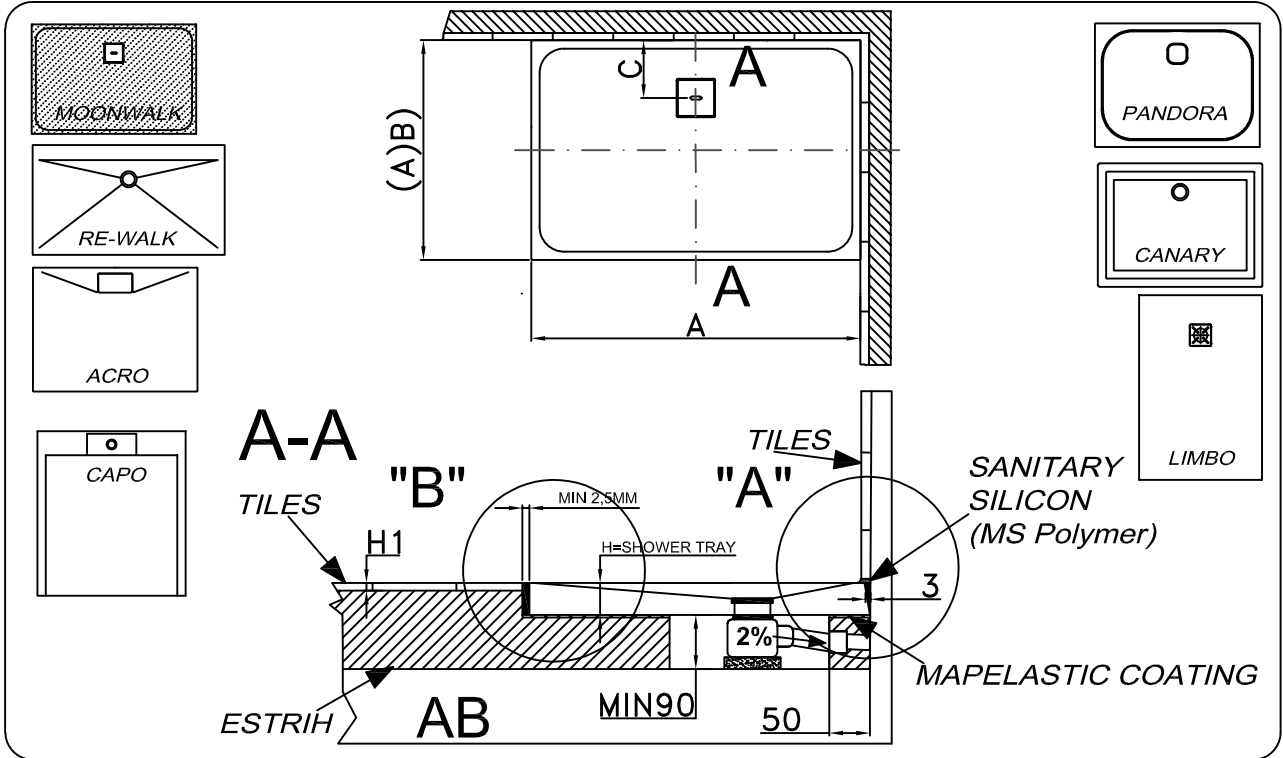


MOONWALK, RE-WALK, ACRO, PANDORA, CANARY, CAPO, LIMBO

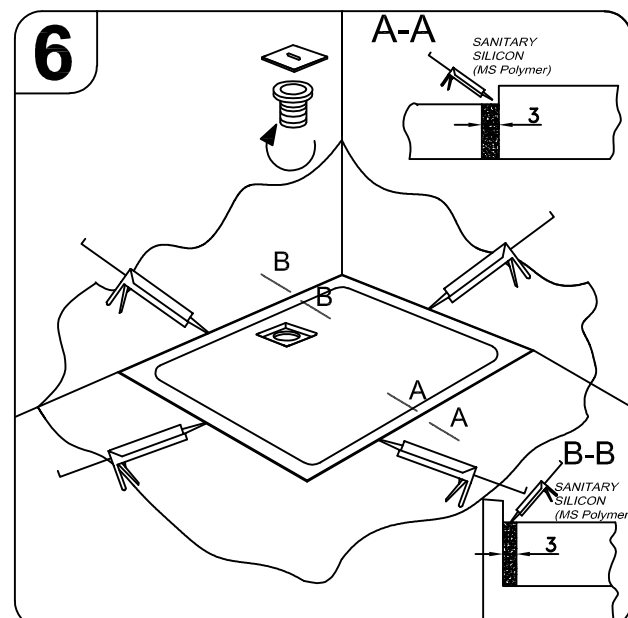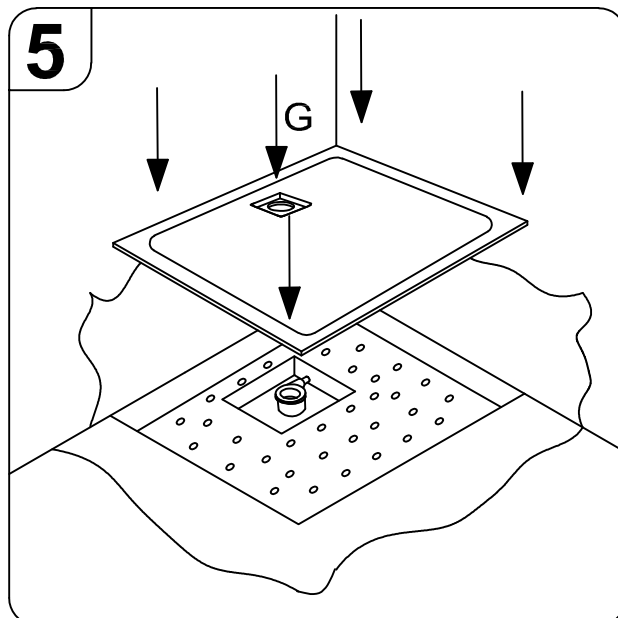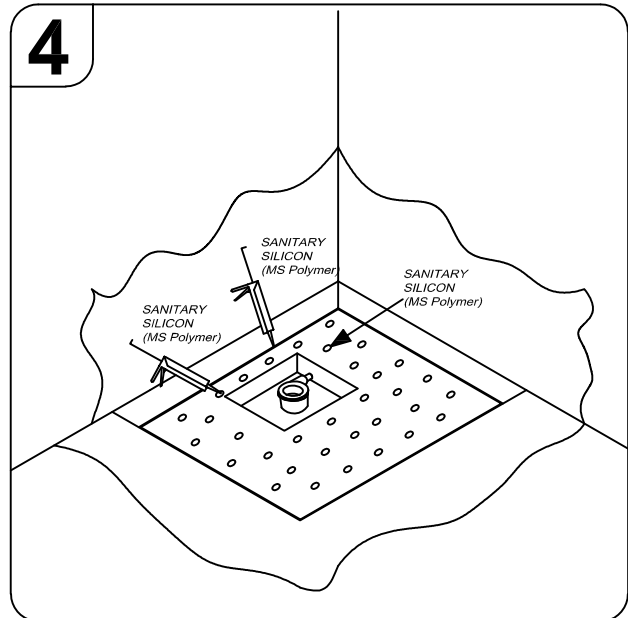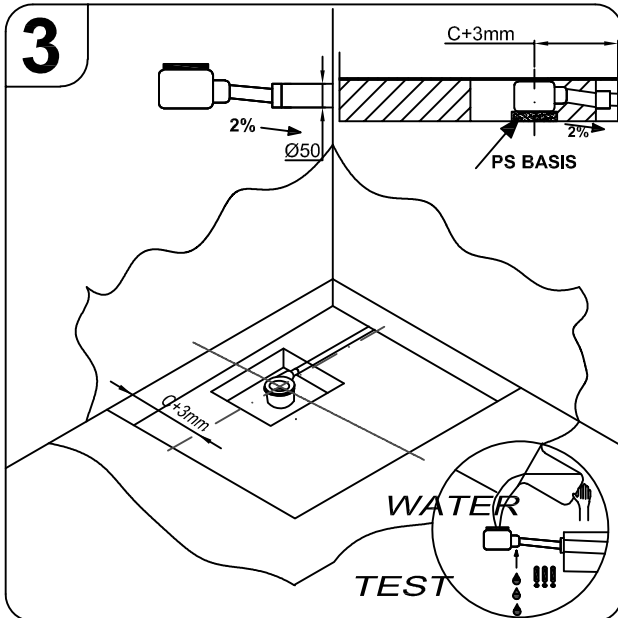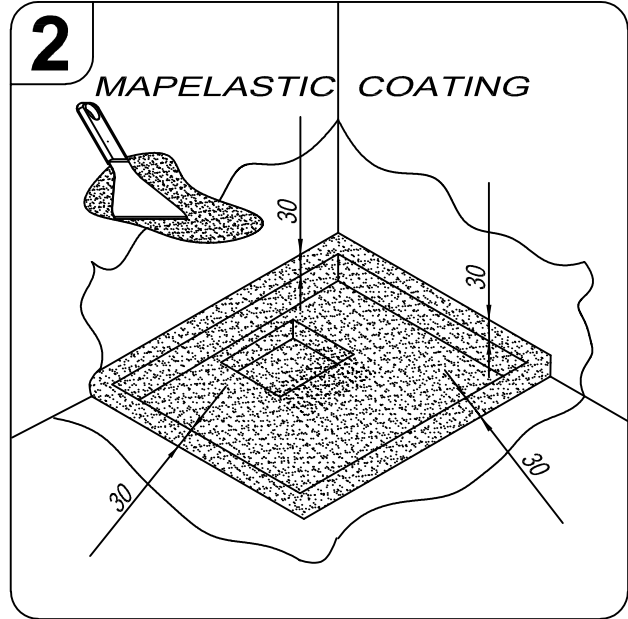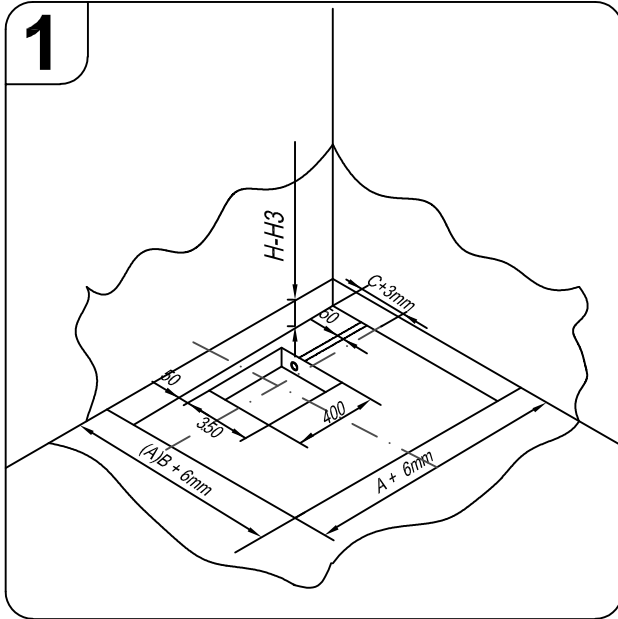


MOONWALK, RE-WALK, ACRO, PANDORA, CANARY, CAPO, LIMBO

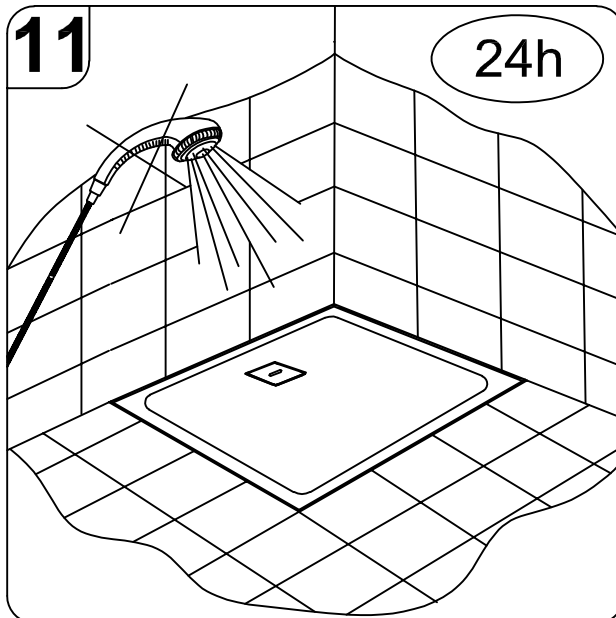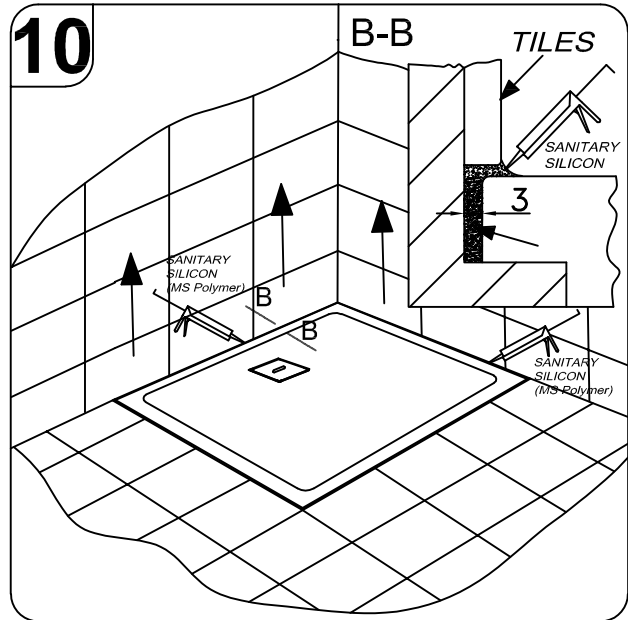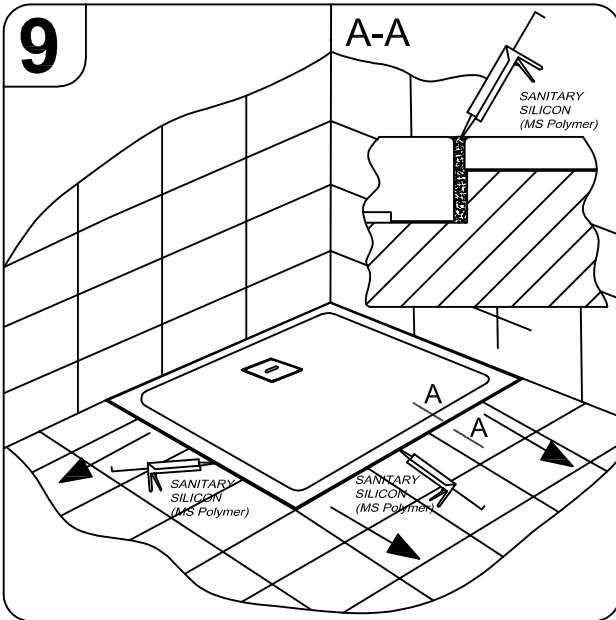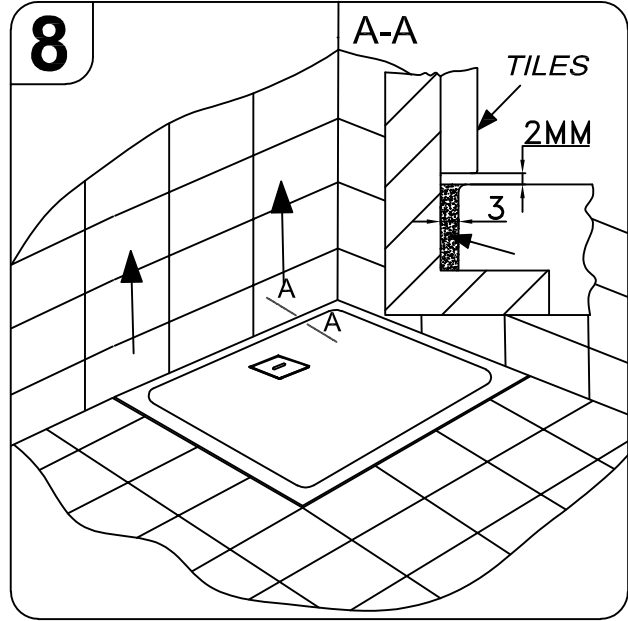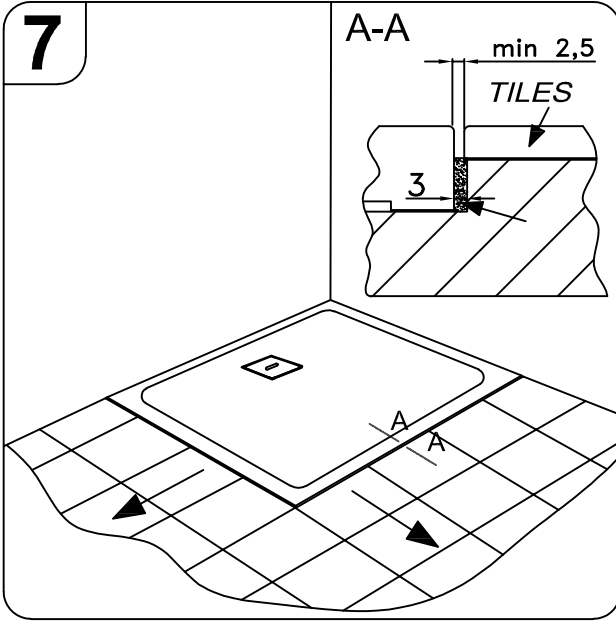


1

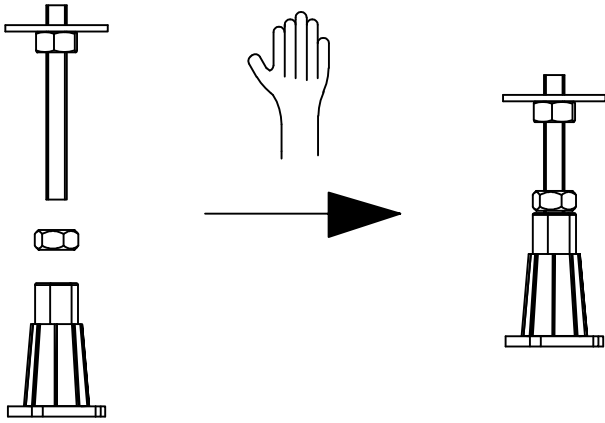


2

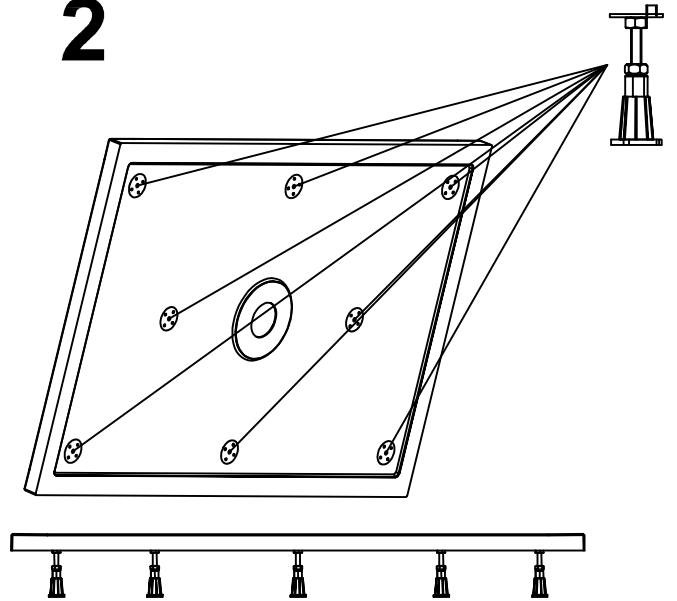


3

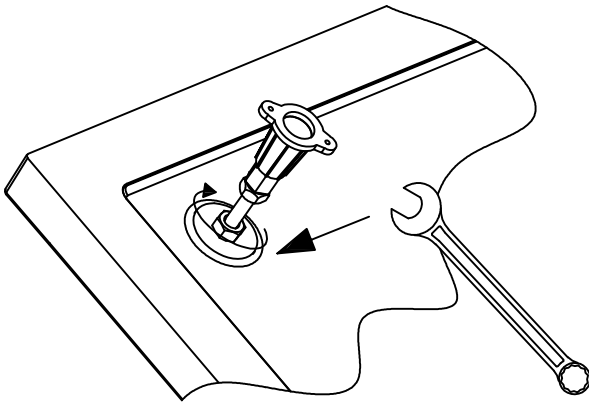

4

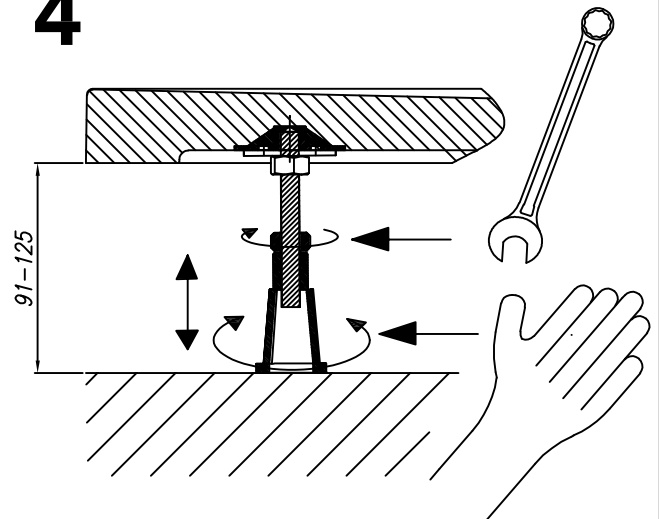

5

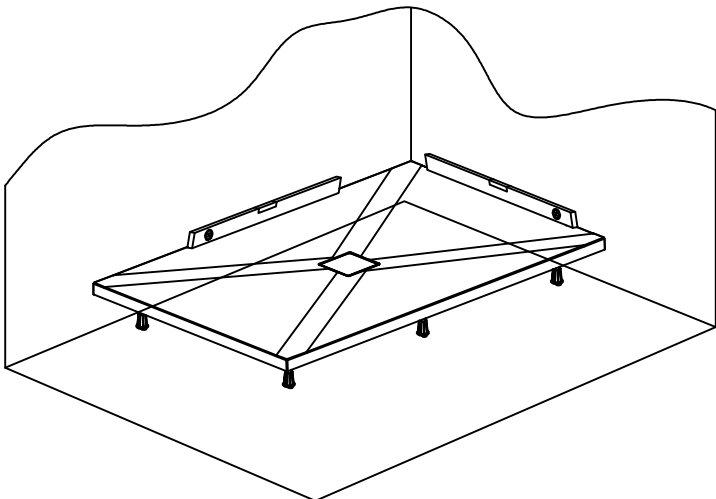

6

